

LEMO / BNC Adapter

ACCESSORIES

P-893 • P-894



P-893.10 LVPZT/ BNC Adapter Cable

LEMO Plug/ BNC female

Cable: RG 174 (PVC), 1 m

Plug: LEMO FFS.00.250.CTCE31 (m) and BNC.ST.250.NTAE31 (f)

Allows LVPZT amplifier output voltage (e.g. E-5059) to be connected to an oscilloscope, etc.

P-894.10 LVPZT Adapter

Adapter: LEMO plug / 2 x LEMO socket

Type: FTL.00.250.CTF. 1 x Stecker, 2 x Kupplung

Allows two cables with LEMO FFA.00.250 male plugs to be connected to a device with LEMO 00.250 socket (e.g. E-505.00 amplifier module or P-891 extension cable).

P-894.30 BNC/ LVPZT- Adapter

LEMO socket/ BNC female

Type: ABA.00.250.NTL

Allows a cable with LEMO FFS.00.250 male plug to be attached to a device with BNC socket (e.g. direct operation of an LVPZT from a signal generator)

Order Information

P-893.10

LVPZT/ BNC Adapter Cable, LEMO Plug to BNC female, Cable RG 174 (PVC), 1 m

P-894.10

LVPZT Adapter, LEMO plug to 2x LEMO socket

P-894.30

BNC/ LVPZT Adapter, LEMO- socket to BNC female

Ask about custom designs!

Related Products

[E-500 • E-501 Modular Piezo Controller](#)

[E-503 Piezo Amplifier Module](#)

[E-505 Piezo Amplifier Module](#)

Drawings / Images



P-894.10 LVPZT
Adapter



P-894.30 BNC/ LVPZT
Adapter